

PULSE

INSTALLATION GUIDE IN-CEILING/IN-WALL SPEAKERS



www.pulse-audio.co.uk

Recommended Tools

- Pencil
- Philips Screwdriver
- Wire strippers
- Hole cutter or Drywall saw

Installation Instructions

- Locate the desired area for the speaker to be mounted
- Check the area for obstructions such as electrical cables, plumbing, heating ducts or framing.
- Use the supplied template and mark out the speaker opening.
- Carefully cut out the opening, using a suitable tool (e.g. Hole saw or Drywall saw).
- Carefully remove the grill to gain access to the 'Dog Ear clamp' securing screws.
- Attach the speaker cable (CAUTION: Make sure to observe +/- polarities).
- Ensure all the 'Dog Ear Clamps' are turned in towards speaker before fitting speaker.
- Insert speaker into the opening.
- Carefully tighten the mounting screws evenly to secure the speaker (CAUTION: Do Not over tighten the mounting screws).
- Carefully push the speaker grill back onto the speaker.

Adjusting The Tweeters

If your model includes the adjustable tweeter, these can be aimed either towards or away from the listening area.

- Gently push the edge of the tweeter to aim it towards the desired area.
- Careful not to damage the tweeter during this process.

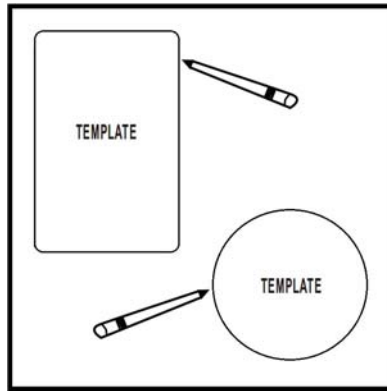


Figure 1:
Trace around template.

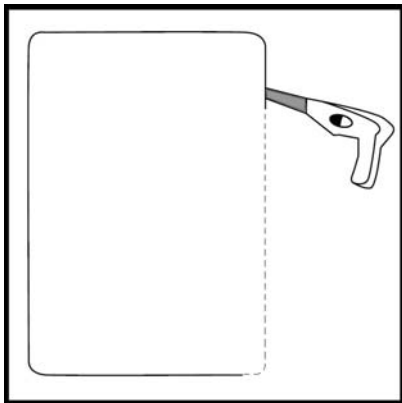


Figure 2:
Cut hole out with appropriate tool.

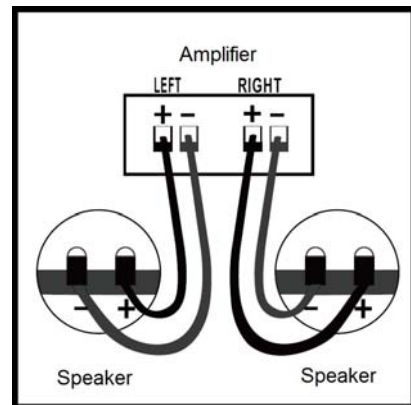


Figure 3:
Feed & hook up speaker wires.

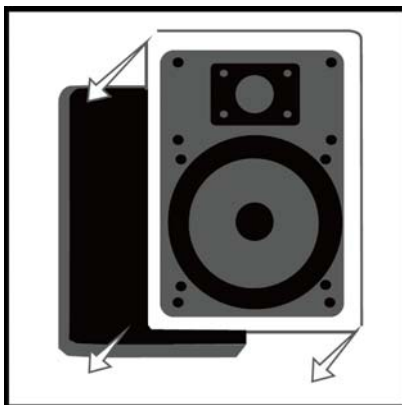


Figure 4:
Place the speaker carefully into the cutout.

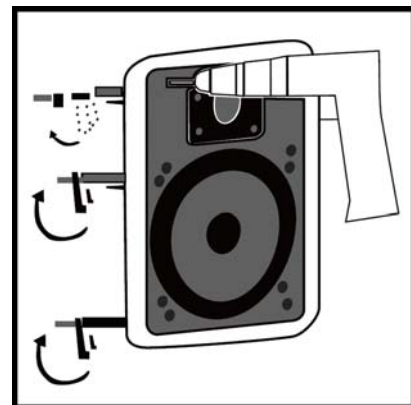


Figure 5:
Tighten retaining clamps to engage the wall/ceiling. (Use a #2 Philips head screwdriver or powered screwdriver).

Compliance

When this product reaches the end of its life, do not dispose with household waste. See www.recycle-more.co.uk for details of how to dispose of PULSE products in an environmentally sound fashion, or contact PULSE directly via www.pulse-audio.co.uk



Warranty

Pulse products are warranted, by Pulse, against manufacturer defects for a period of one year from the original date of purchase. This warranty is limited to manufacturer defects, in either materials or workmanship. PULSE, or any other worldwide divisions of Premier Farnell PLC, is not responsible for any consequential or inconsequential damage to any other component, structure or the cost of installation or removal of said items. Defective items should be returned to the retailer from whom they were originally purchased.

This warranty will not cover damage due to improper use such as (and not limited to) damaged cones, mounting frames, voice coils or items damaged by weather damaged items.

For questions or specific information regarding warranty replacement or repair, contact: